

OPERATION[®]

AGES 4+

1+ Players

A4053

WARNING: 

CHOKING HAZARD - Small Parts.
Not for children under 3 years.

ADULT ASSEMBLY REQUIRED

CONTENTS

Game tray with Sam and tweezers • 11 funny ailment parts

OBJECT

Collect the most ailments by successfully operating on Sam.

THE FIRST TIME YOU PLAY

1. Insert batteries (see battery information below)
2. Remove the ailment pieces from the plastic frame. Use an emery board or sandpaper to remove the excess plastic from the game pieces, if necessary. Discard the frame after removing the pieces.
3. Remove the tweezers by gently pressing down on them and sliding them out.

GAME SETUP

1. Place each ailment into the matching space on Sam.

HOW TO PLAY

Let the youngest doctor go first. Turns go to the left.

ON YOUR TURN

2. Use the tweezers and try to remove an ailment without touching the metal sides of the space. If the tweezers touch the sides, you'll get buzzed and Sam's nose lights up!
 - a. If you remove the ailment without getting buzzed, keep the ailment in front of you and press Sam's nose. Give the tweezers to the player on your left.
 - b. If you set off the buzzer while operating, leave the ailment in the space and give the tweezers to the player on your left.

HOW TO WIN

The game ends when all 11 ailments have been removed. The doctor with the most pieces wins!

IMPORTANT: BATTERY INFORMATION

CAUTION:

1. TO AVOID BATTERY LEAKAGE
 - a. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
 - b. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
 - c. Remove exhausted or dead batteries from the product.
 - d. Remove batteries if product is not to be played with for a long time.
 - e. Do not short-circuit the supply terminals.
 - f. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**
2. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.


POWER UP WITH

BATTERIES

x2
1.5V AA or LR06
ALKALINE BATTERIES

To replace batteries:

Phillips/cross head screwdriver
(not included) needed to insert batteries.

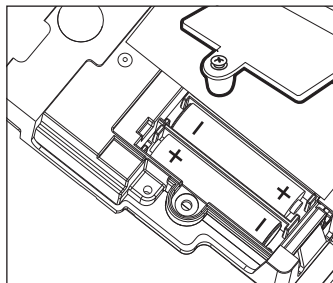

© 2012 Hasbro, Pawtucket, RI 02861-1059 USA. All Rights Reserved. TM & ® denote U.S. Trademarks. Consumer contact: USA and Canada: Hasbro Games, Consumer Affairs Dept., P.O. Box 200, Pawtucket, RI 02861-1059 USA. ☎ 888-836-7025. Hasbro Australia Ltd., Level 2, 37-41 Oxford Street, Epping, NSW 2121, Australia. ☎ 1300 138 697. Hasbro NZ (a branch of Hasbro Australia Ltd.), 221 Albany Highway, Auckland, New Zealand. ☎ 0508 828 200.

101A405300

GAME.COM

Ask a parent before going online.

Hasbro
Gaming[®]