

AGES
3+




**My Magical
Princess Twilight Sparkle™**
About Your New Best Friend

TO INSERT BATTERIES



Use a Phillips/cross head
screwdriver (not included)
to insert 4x 1.5V C
alkaline batteries.

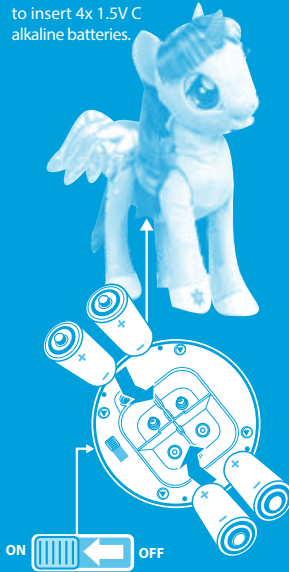

NOTE: To conserve
battery life, slide switch
to OFF when pet is not
in use.

IMPORTANT: BATTERY INFORMATION


⚠ CAUTION:

1. TO AVOID BATTERY LEAKAGE

- Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
- Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
- Remove exhausted or dead batteries from the product.
- Remove batteries if product is not to be played with for a long time.
- Do not short-circuit the supply terminals.
- RECHARGEABLE BATTERIES:** Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

- Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.

**I have several sensors;
touch them and I'll respond!**

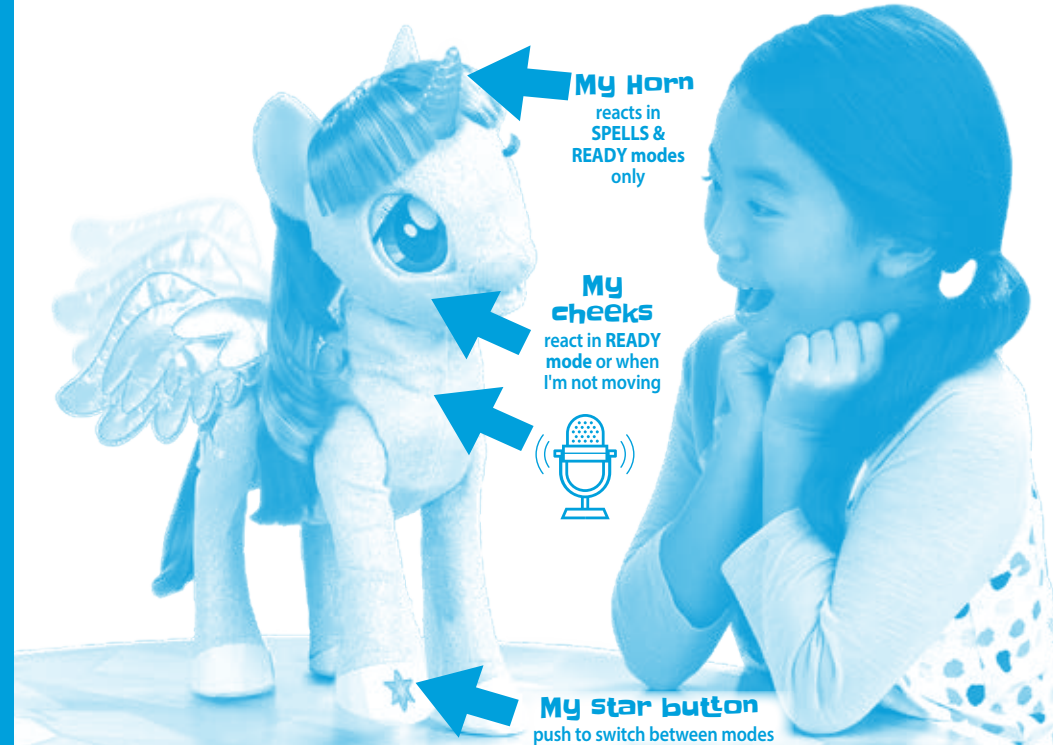

Four Modes of PLay!



1. **FRIENDSHIP:** Press the Star Button on my hoof to hear about friendship.
2. **STORY:** Press the Star Button again to hear exciting stories from Equestria and beyond!
3. **SINGING:** Press the Star Button again to hear me sing.
4. **SPELLS:** Press the Star Button one more time...when my horn flashes, touch it to hear me talk about magic and spells.

After one of my four modes of play, I will return to **READY mode** until you press my Star Button again. When you talk to me in **READY mode**, I'll move my head and hoof, make sounds, and light up my horn.

If I'm not in one of my four modes when you talk to me, I'll move my head and hoof, make sounds, and light up my horn. so you can tell I'm working! If you have music playing where I can hear it or make other sounds nearby, I'll sing one of my own songs!

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAN ICES-3 (B) / NMB-3 (B)

My Horn

I have a horn that lights up and flashes. To activate my horn, gently touch the side, not the tip.

My Wings

I have Alicorn wings that open and move up and down. Remember, my wings are delicate. Never hold me by my wings; always support my weight with your hands.



My Mane and Tail

After a long day of friendship lessons, there's nothing I like more than having my colorful mane and tail braided to look splendid!

TIARA

Tuck the ends of my tiara into my ears to make sure it stays securely on my head while we play.



When I've been left by myself for a while, I will go to sleep and may even make sleepy noises! You can wake me up by pressing the Star Button on my hoof.

Tips for Playing

- If I don't respond, you may need to move closer to me or speak louder.
- If my horn doesn't activate, try touching the side of it instead of the tip.
- Remember, I'm poseable. When you move my legs, you'll hear a loud clicking sound, and that's okay!
- If I am not functioning properly, it may be time to change the batteries.
- Don't get me wet. Gently clean me with a clean cloth and wipe off dirt immediately. To remove stains, use a slightly damp cloth. Do not use detergent or stain removers.

Please note:

While I'm in any of my four modes, my microphone is not active and I cannot respond to speech or noise. My cheek sensors are also not responsive while I'm in one of my four modes of play. In my four modes of play, I will perform various actions. When I'm done, I will return to **READY mode** and all my sensors will be responsive again. If my star button is pressed during one of my stories, songs, or other actions, I will stop what I'm doing and proceed to the next mode. For example, if I'm in **Story Mode**, pressing my star button will result in starting **Singing Mode**.



www.mylittlepony.com

C0299 PN00018424

Product and colors may vary. Retain this information for future reference.

MY LITTLE PONY: THE MOVIE © 2017 My Little Pony Productions, LLC.

Licensed by Hasbro.

© 2016 Hasbro, Pawtucket, RI 02861-1059 USA. All Rights Reserved.

TM & © denote U.S. Trademarks. US/CANADA TEL. 1-800-255-5516.

U.S. Pat. No. 8814048, Pat. Pend. Apps. GB1223296.3 & HK14101082.1.