



PLAY

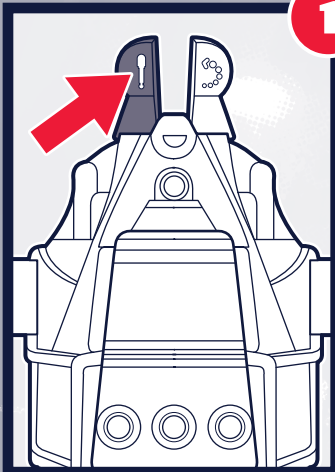


Press button 1 to fire projectile. Press and hold button to fire all projectiles in MISSILE MODE.

MISSILE MODE

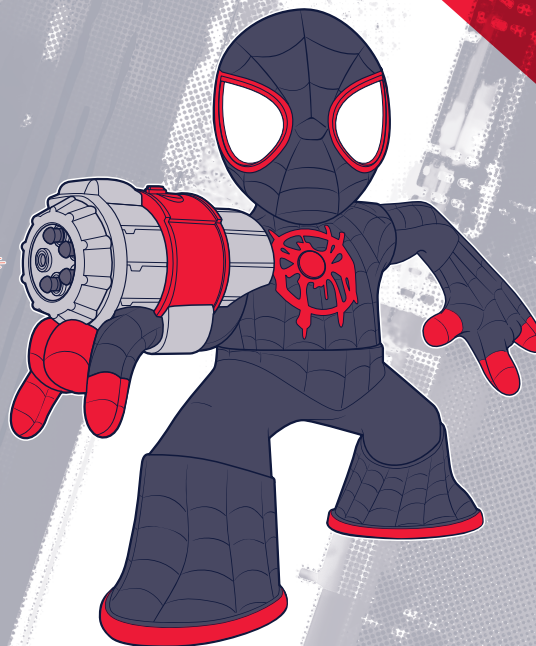

PLAY

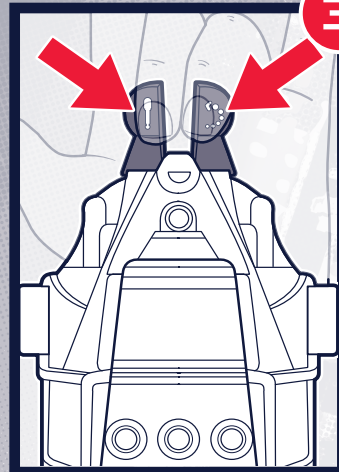

Press and hold both buttons to play a phrase, rotate figure, & blast projectiles all at once in DEFENSE MODE.

DEFENSE MODE



ADJUST GAUNTLET FIT AS SHOWN.

NOTE: For best results, aim gauntlet directly at eye level of figure.

#### FCC STATEMENT


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.


CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAN ICES-3 (B) / NMB-3 (B)

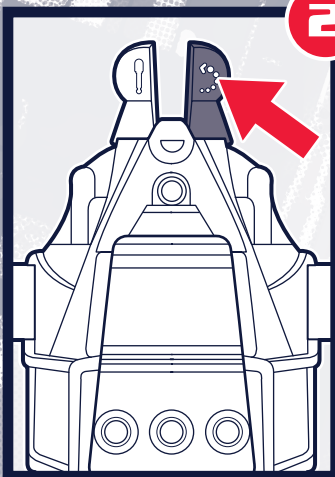

Press and hold button 2 to rotate figure in ACTION MODE.

ACTION MODE

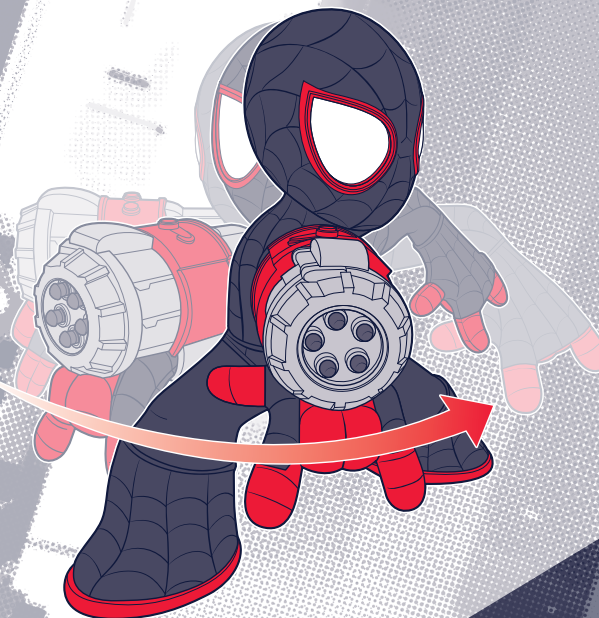

SPIDER-MAN  
INTO THE SPIDER-VERSE

AGES 5+



For full play replace demo batteries with alkaline batteries. See battery instructions.

**WARNING:**  
Contains button or coin cell battery.  
Hazardous if swallowed – see instructions.

**SHOCKSTRIKE  
MILES MORALES SPIDER-MAN**

E2842 PN0027362


Product and colors may vary. Retain this information for future reference. Le produit et les couleurs peuvent varier. Conservez cette information pour référence ultérieure. © MARVEL. © 2018 SPA & CPIL. \*\* and/or TM® & © 2018 Hasbro, Pawtucket, RI 02861-1059 USA. All Rights Reserved. Tous droits réservés. TM & ® denote U.S. Trademarks. HASBRO CANADA, LONGUEUIL, QC, CANADA J4G 1G2. US/CANADA TEL. 1-800-255-5516.






**TO REPLACE BATTERIES**

**x4 1.5V AA ALKALINE BATTERIES REQUIRED**  
(Not Included)

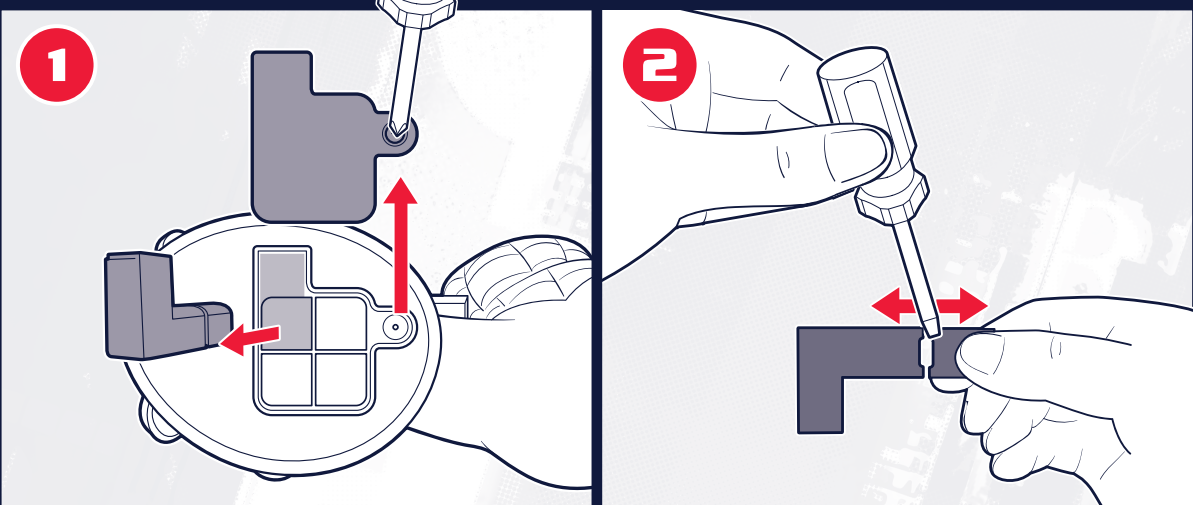

Use a Phillips / cross head screwdriver (not included) to open battery housing. Remove battery insert.

Use a flat head screwdriver (not included) to pry off the end of the battery insert.

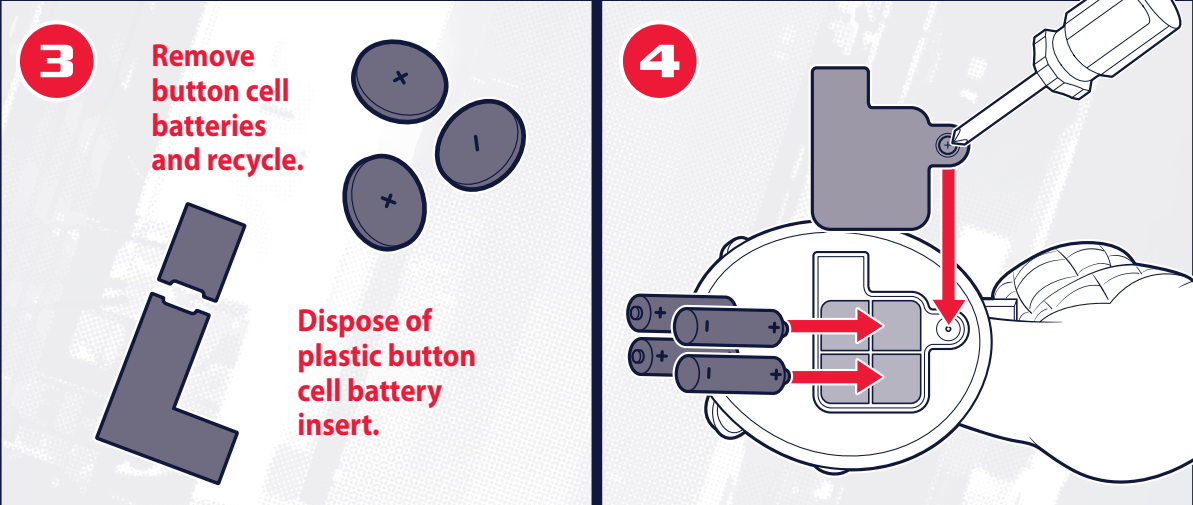


**NOTE:** Until battery pack is replaced, figure will only function in TRY ME mode.

Replace demo batteries with alkaline batteries. Use a Phillips/cross head screwdriver (not included).

**TO INSTALL BATTERIES**

**x2 1.5V AAA ALKALINE BATTERIES REQUIRED**  
(Not Included)


Use a Phillips / cross head screwdriver (not included) to open battery housing. Install batteries as shown.

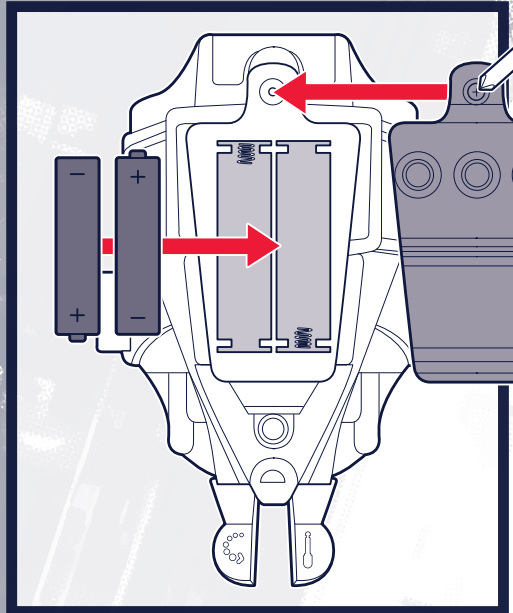


**ACTIVATE**



Press chest button to wake up & activate eye FX and phrases.

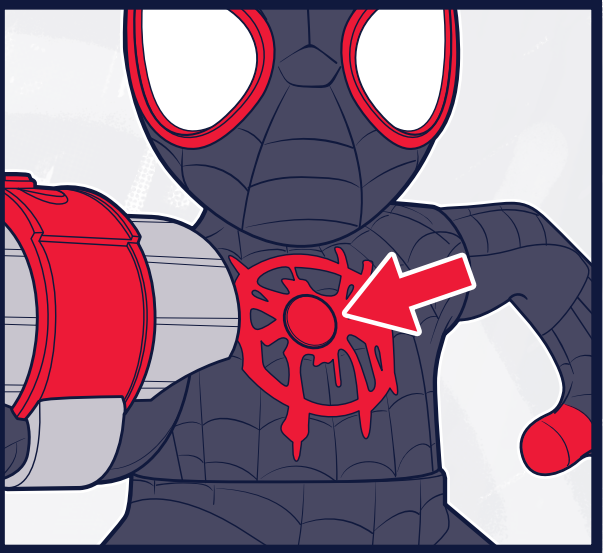

Insert projectiles as shown.

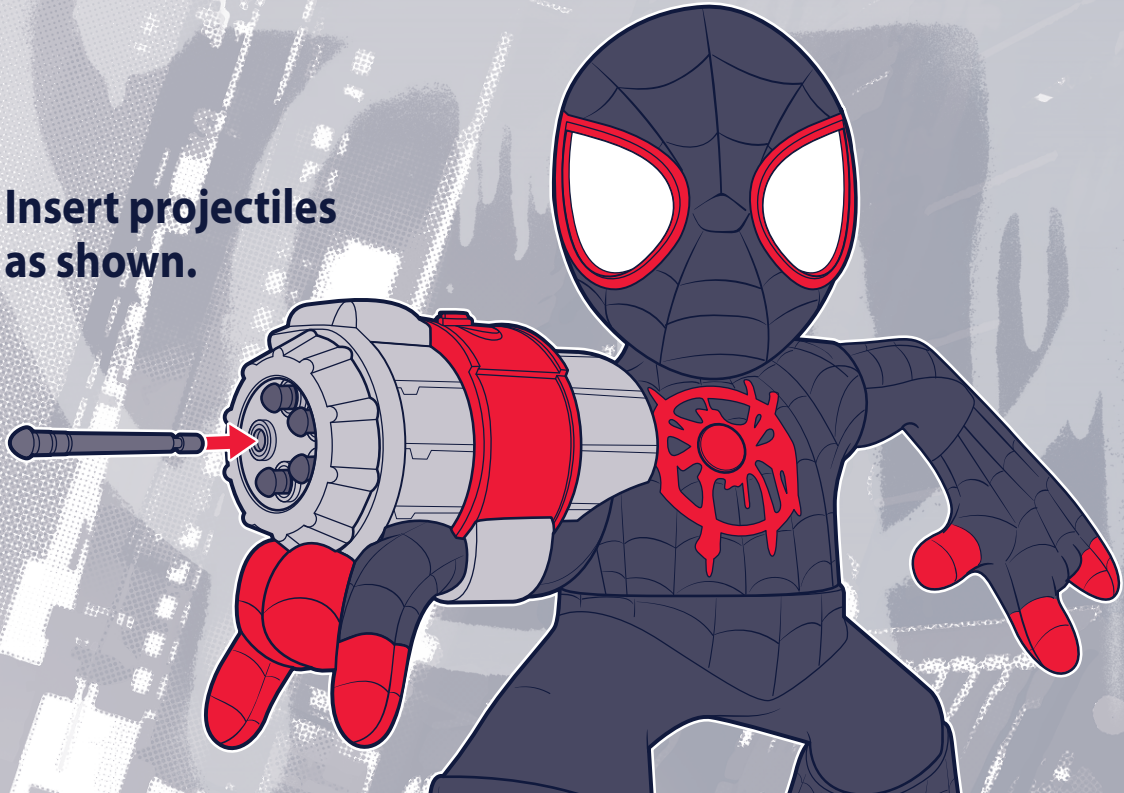

**IMPORTANT: BATTERY INFORMATION**  
**WARNING:**

- 1. As with all small batteries, the batteries used with this product should be kept away from small children who still put things in their mouths. This product contains a Button or Coin Cell Battery. A swallowed Button or Coin Cell Battery can cause internal chemical burns in as little as two hours and lead to death. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention. Promptly see a doctor and have the doctor phone (202) 625-3333 collect. If you reside outside the United States, have the doctor call your local poison control center.
- 2. TO AVOID BATTERY LEAKAGE
- a. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
- b. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
- c. Remove exhausted or dead batteries from the product.
- d. Remove batteries if product is not to be played with for a long time.
- e. Do not short-circuit the supply terminals.
- f. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.
- 3. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.