




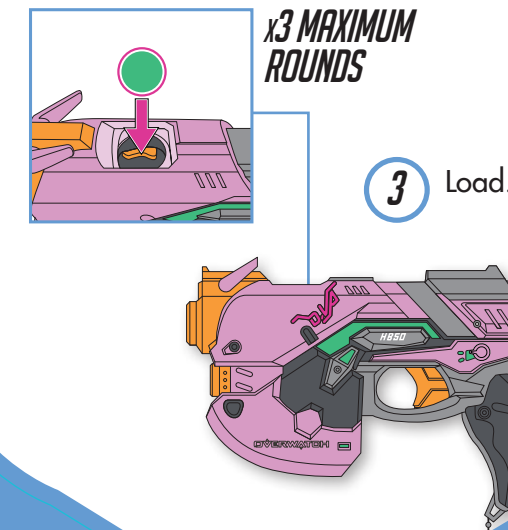


LOAD & FIRE

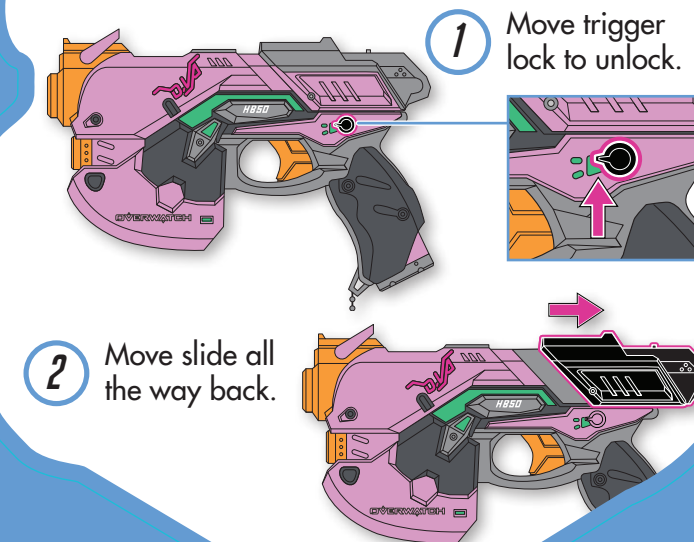

- 4 Move slide all the way forward. Ready indicator will appear on end of blaster. Blaster is primed when ready indicator is visible.

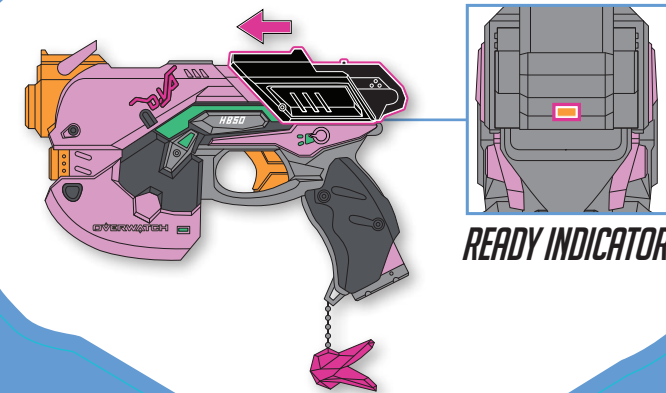


- 5 Pull trigger to fire 1 round. To fire another round, move slide all the way back and all the way forward, then pull trigger to fire.

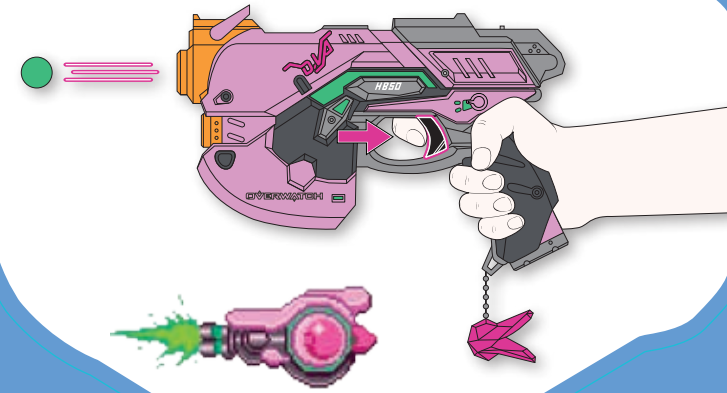

TRIGGER LOCK

On side of blaster, move trigger lock down to lock trigger and up to unlock. Always put the trigger lock in locked position when blaster is not in use and when storing blaster.

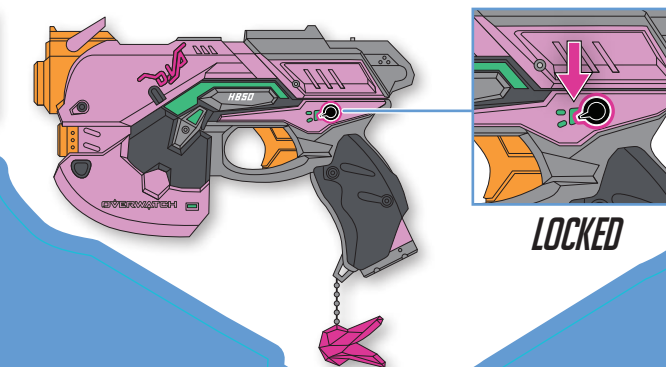

RESET BUTTON

Push down and hold reset button and pull slide all the way back. Remove any jammed rounds. Make sure you aim the blaster away from you and anyone else while releasing jammed rounds.

