


Baking Basics

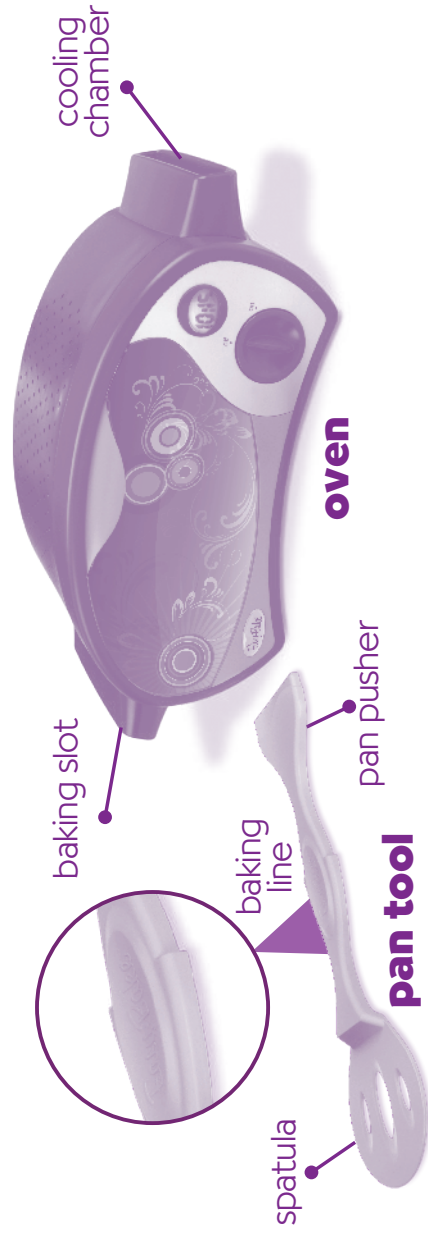

1. Preheat EASY-BAKE® Ultimate Oven for 20 minutes.

2. The baking pan goes into the baking slot as shown. Follow directions on food mixes (Not included. Sold separately).

3. Use pan pusher to push pan into baking chamber. Stop when the baking line on the handle lines up with the bottom edge of baking slot as shown.

Do not use your hands to push pan in. Do not leave pan tool in oven.

Look inside the oven to make sure the metal doors are closed on both sides. If one door is slightly open, use the pan tool to push it shut. If the pan is sticking out on the other side, you'll need to push the pan all the way through (Step 4), take it out (Step 5) and start again (Step 2).

4. When the baking time is done according to the instructions of the refill packs (Not included. Sold separately.), use pan pusher to push pan all the way through to cooling chamber.


Be careful—pan is hot!

Allow pan to cool in the cooling chamber for 5 minutes.

5. When cooling time is done, use the spatula to remove the pan from the oven.

6. Turn off oven and unplug when finished baking. Wait for oven to cool, then wipe clean with a damp cloth.

easybake.com



Easy-Bake Ultimate Oven

Labels: cooling chamber, baking slot, pan pusher, pan tool, spatula, baking line, on/off switch, power indicator light.

easybake.com

MADE IN INDIA.
 HASBRO CANADA, LONQUÉVILLE, QC, CANADA
 146 162, US/CANADA TEL. 1-800-255-5516

Product and colors may vary. Retain this information for future reference. © 2015 Hasbro, Pawtucket, RI 02864-059 USA. All Rights Reserved. Tous droits réservés. TM & © Denote U.S. Trademarks.
 HASBRO CANADA, LONQUÉVILLE, QC, CANADA
 146 162, US/CANADA TEL. 1-800-255-5516

E6120 PNO0030147

BAKING STAR
 edition

Easy-Bake Ultimate Oven

If you have any questions, comments, or need additional information concerning your EASY-BAKE® Ultimate Oven, or if you need additional information concerning this product or its parts, please call our Hasbro Consumer Affairs hotline at 1-800-255-5516, Monday through Friday during business hours (Eastern time).

CAUTION - ELECTRIC TOY: This toy has a heating element, which can result in burns. Not recommended for children under 8 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

CAUTION - SUPERVISION REQUIRED - ELECTRIC TOY - UNPLUG WHEN NOT IN USE.

Easy-Bake Ultimate Oven

AGES 8+ ADULT SUPERVISION REQUIRED. NO ASSEMBLY REQUIRED.

UL LISTED 739G

Use only with EASY-BAKE® Ultimate Oven mixes. Food mixes not included. Each sold separately.

BAKING STAR edition

Be Safe Before you start baking, check out these simple safety tips and reminders.

ELECTRICAL REQUIREMENTS: 120 Volts AC only – 60 Hz, 100 Watts

⚠ DANGER: To prevent electric shock, do not immerse oven in water; wipe clean with a damp cloth. We recommend that you periodically examine the toy for potential hazards and that any potentially hazardous parts be repaired or replaced. (See back page for company contact information.)

ADULT SUPERVISION REQUIRED.

⚠ Safety Tips and Cautions:

HOT pan and food - handle carefully!
HOT oven interior, oven top, oven bottom and back. Do not touch!

NOTE: The "new" smell the oven gives off the first few minutes is the protective oil evaporating from the metal parts in the oven. You may also see a vapor. The oil is food-grade, non-toxic, and evaporates quickly. Do not immerse oven in water.

STAIN ADVISORY: Food mixes may cause staining. Cover your workspace with wax paper or a plastic mat, and avoid spilling food on clothing. If dry mix is spilled, use a broom or vacuum to clean it up. If wet mix is spilled, wash immediately with soap and water.

ALWAYS:

- ✓ Hand-wash and dry pan before using for the first time,
- ✓ Wash your hands before and after baking.
- ✓ Make sure oven rests flat on a level surface when in use.
- ✓ Use pan tool to move pan through oven.
- ✓ Allow oven, pan, and food to cool before handling.
- ✓ Turn off and unplug oven when not baking.

NEVER:

- ✗ NEVER leave empty pan or pan tool in oven.
- ✗ NEVER use plugged-in oven around water.
- ✗ NEVER leave plugged-in oven unattended.
- ✗ NEVER put your fingers in oven.

Here's what you'll need to bake

Easy-Bake Ultimate Oven

Labels: cooling chamber, baking slot, pan pusher, pan tool, spatula, baking line, on/off switch, power indicator light.

Easy-Bake Ultimate Oven - food mixes required - not included.

Here are some other things you might also need from your kitchen:

- water
- measuring spoons
- mixing bowls and spoons
- cooking spray
- flour (optional)
- plastic sandwich bag (optional)
- scissors (optional)
- wax paper or plastic mat