

Surface clean only.

Surface clean only. Gently wipe off dirt with soft damp cloth. Do not get wet.
Do not use stain remover.

FCC STATEMENT: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAN ICES-3 (B) / NMB-3 (B)

E8417 PN00048446

Sesame Street® and associated characters, trademarks, and design elements are owned and licensed by Sesame Workshop. © 2020 Sesame Workshop. All Rights Reserved. ®* and/or TM* & © 2020 Hasbro, Pawtucket, RI 02861-1059 USA. All Rights Reserved. Tous droits réservés. TM & ® denote U.S. Trademarks. HASBRO CANADA, LONGUEUIL, QC, CANADA J4G 1G2. US/CANADA TEL. 1-800-255-5516. Retain this information for future reference.



PEEKABOO COOKIE MONSTER

NOTE TO CONSUMER:

This toy is packaged in **TRY ME** mode. When you bring your toy home, activate its full range of features by moving the switch from **TRY ME** to **ENGLISH**.



PLAYSKOOL®


**OVER
18M**



To begin play, press Cookie Monster's belly to activate "peekaboo" feature and hear sounds and phrases.

For additional play, squeeze and hold Cookie Monster's belly for 5 seconds to activate "hide-and-seek" mode.


Cookie Monster will "go to sleep" after 6 seconds of inactivity. Press his belly to wake him up again.

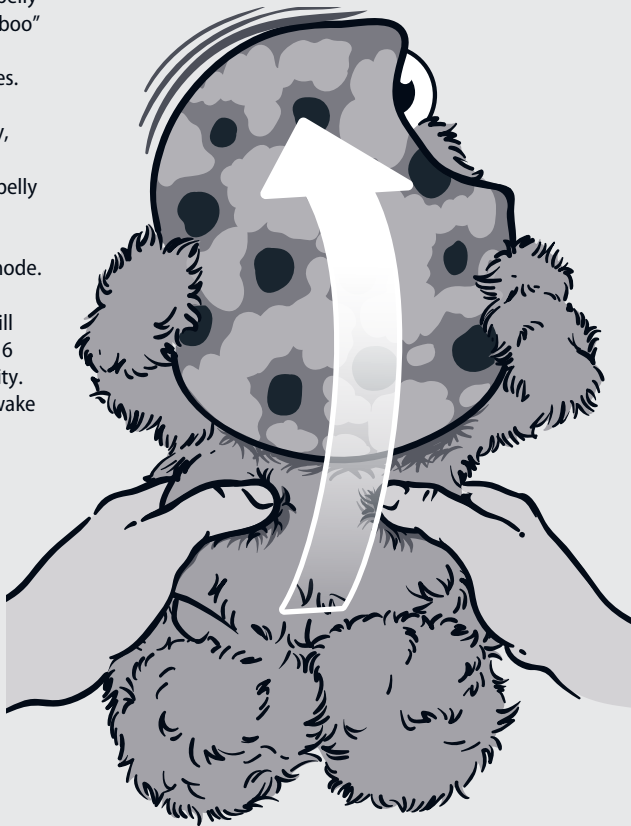

TO REPLACE BATTERIES

2x 1.5V AA ALKALINE BATTERIES REQUIRED

Replace demo batteries with alkaline batteries. Use a Phillips/cross head screwdriver (not included).

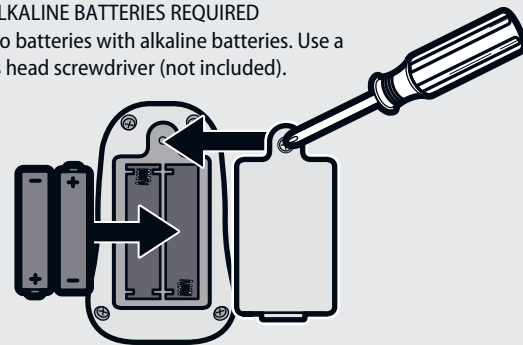

IMPORTANT: BATTERY INFORMATION

⚠ CAUTION:

1. TO AVOID BATTERY LEAKAGE

- Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
- Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
- Remove exhausted or dead batteries from the product.
- Remove batteries if product is not to be played with for a long time.
- Do not short-circuit the supply terminals.
- RECHARGEABLE BATTERIES:** Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

- Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.