



CLEARING A JAM

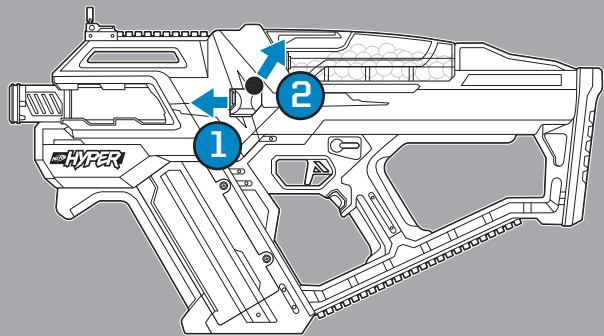


Open access door to remove any jammed rounds. Make sure you aim the blaster away from you and anyone else while releasing jammed rounds.

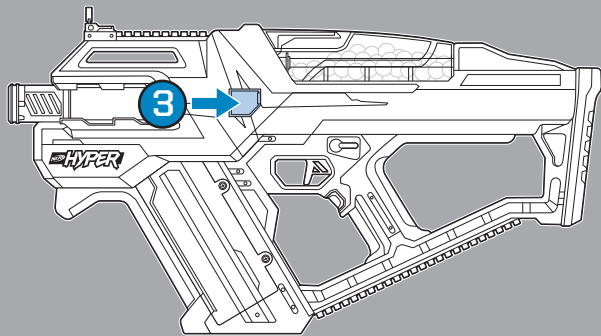


Close access door. Door must be fully closed for blaster to fire.

TACTICAL RAILS

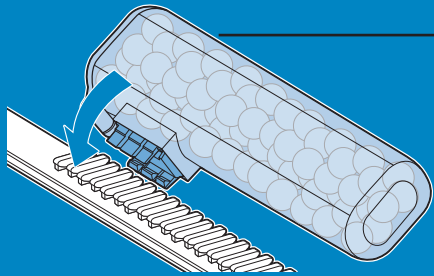

Attach Nerf Hyper™ canisters to rails for additional capacity. (Canisters not included.)

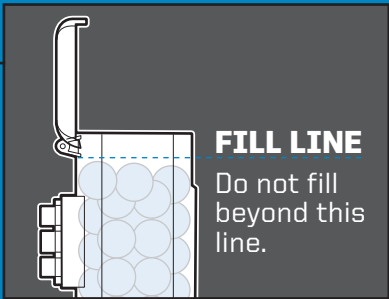

FILL LINE
Do not fill beyond this line.



Nerf Hyper rounds are compatible only with Nerf Hyper blasters.

STORING YOUR BLASTER

Do not store blaster primed and ready to fire.



Hey NERF Nation!
Join us online and keep up with the latest and greatest NERF news!



NERF and HASBRO and all related trademarks and logos are trademarks of Hasbro, Inc.
© 2020 Hasbro. TM & ® denote U.S. Trademarks.
Hasbro, Pawtucket, RI 02861-1059 USA. US/CANADA TEL. 1-800-255-5516.
Retain this information for future reference.
E8911 PN00065923



TO AVOID EYE INJURY:

WARNING: Do not aim at eyes or face. Use of eyewear required for players and people within range. Use only official Hyper rounds. Do not modify rounds or blaster. Ages 14 and up.



14+


READ ALL INSTRUCTIONS COMPLETELY BEFORE USE.

HOPPER LID

Pro Tip: Open FULLY to load.

ACCESS DOOR

Must be fully closed for blaster to fire.

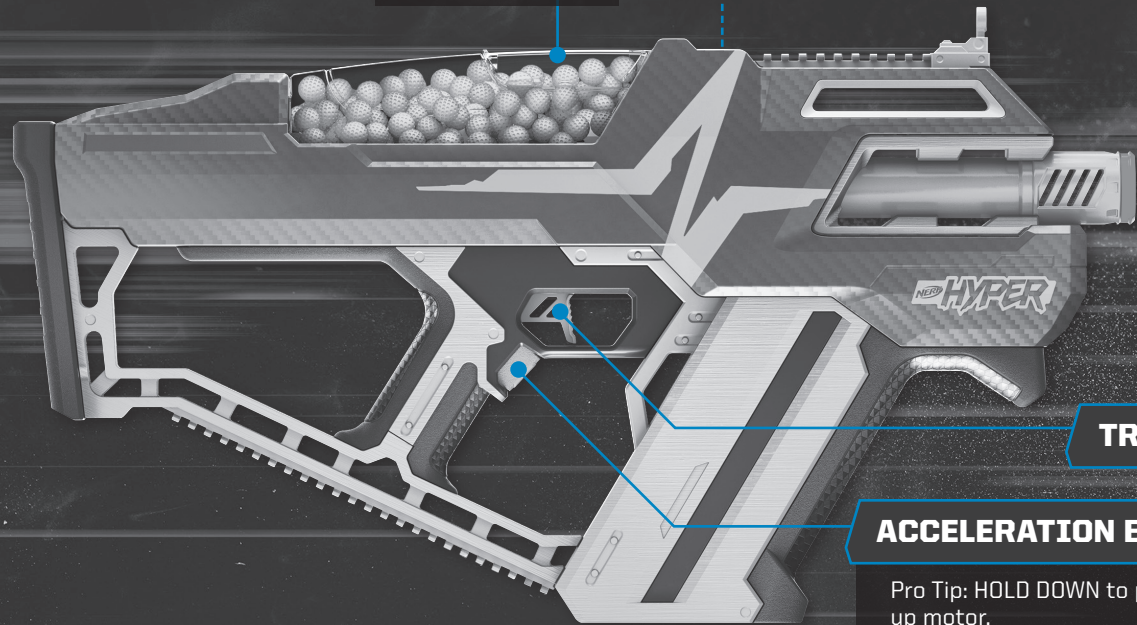

TRIGGER

ACCELERATION BUTTON


Pro Tip: HOLD DOWN to power up motor.

MACH-100™





Not included.

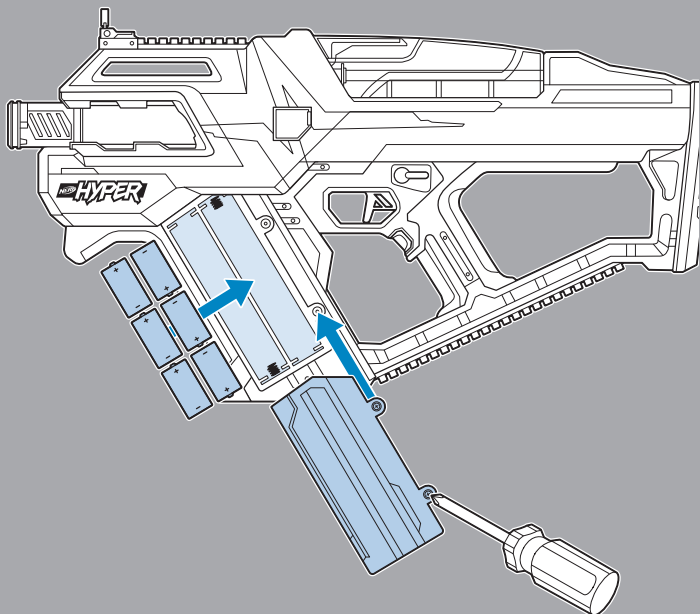

IMPORTANT: BATTERY INFORMATION


Retain this information for future reference. Batteries should be replaced by an adult.

CAUTION:

TO AVOID BATTERY LEAKAGE


1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
 2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
 3. Remove exhausted or dead batteries from the product.
 4. Remove batteries if product is not to be played with for a long time.
 5. Do not short-circuit the supply terminals.
 6. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.
- Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.

LOAD

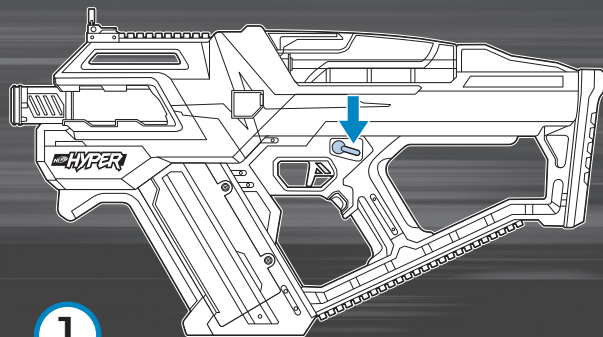

1



Make sure trigger lock is locked.

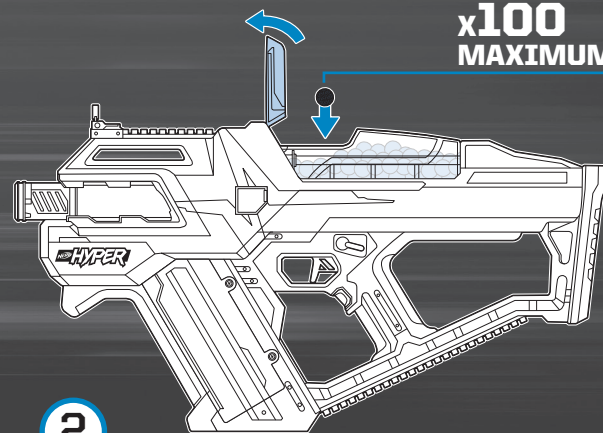

2

Lift hopper lid. Add rounds to hopper. **DO NOT OVERFILL.** Includes 80 rounds; additional rounds not included.


x100
MAXIMUM

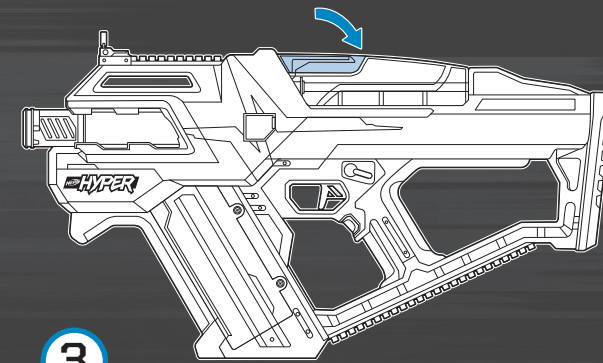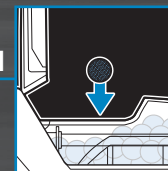

3


Close lid. Hopper lid must be fully closed for blaster to fire.

TRIGGER LOCK

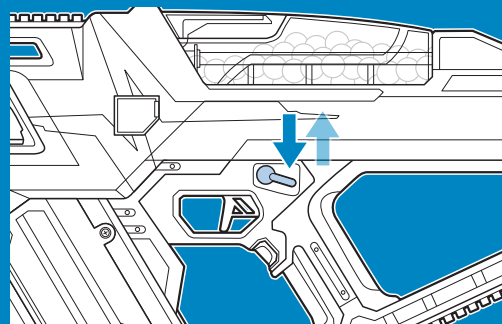

On side of blaster, move trigger lock down to lock trigger and up to unlock. Always put the trigger lock in locked position when blaster is not in use and when storing blaster.


FIRE

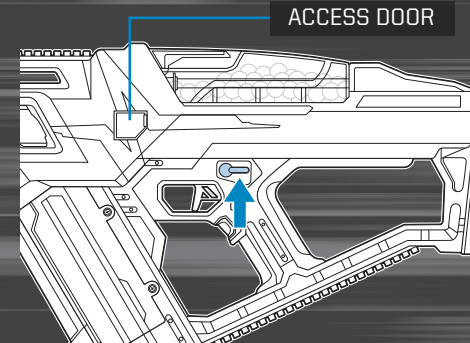

ACCESS DOOR

1

Move trigger lock to unlocked position. Access door must be fully closed for blaster to fire.

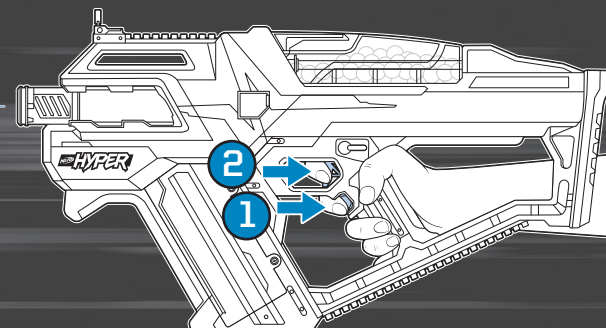

2

Press and hold acceleration button, and pull trigger to fire multiple rounds.