
## TO RÉMOVE MAGAZINE

MAKE SURE TRIGGER
LOCK IS IN LOCKED
POSITION. PRESS
RELEASE BUTTON
AND PULL MAGAZINE
OUT OF BLASTER.

## **CLEARING A JAM**

REMOVE MAGAZINE.
WHILE HOLDING DOWN
RESET BUTTON, MOVE
HANDLE BACKWARD
AND FORWARD TO
RELEASE JAMMED
ROUND(S). MAKE SURE
YOU AIM THE BLASTER
AWAY FROM YOU AND
ANYONE ELSE WHILE
RELEASING JAMMED
ROUNDS.

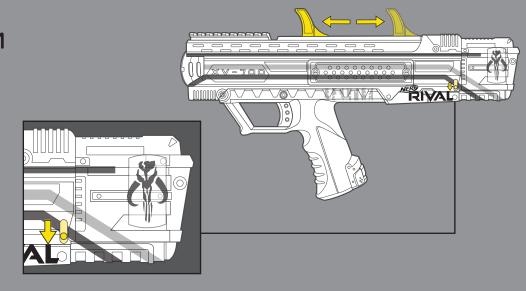


© & TM Lucasfilm, Inc. NERF and HASBRO and all related trademarks and logos are trademarks of Hasbro, Inc. © 2020 Hasbro. TM & ® denote U.S. Trademarks. Reg. Des. No. EC001433387-0015.


Hasbro, Pawtucket, RI 02861-1059 USA. US/CANADA TEL. 1-800-255-5516.


Retain this information for future reference.


F2413 PN00057042



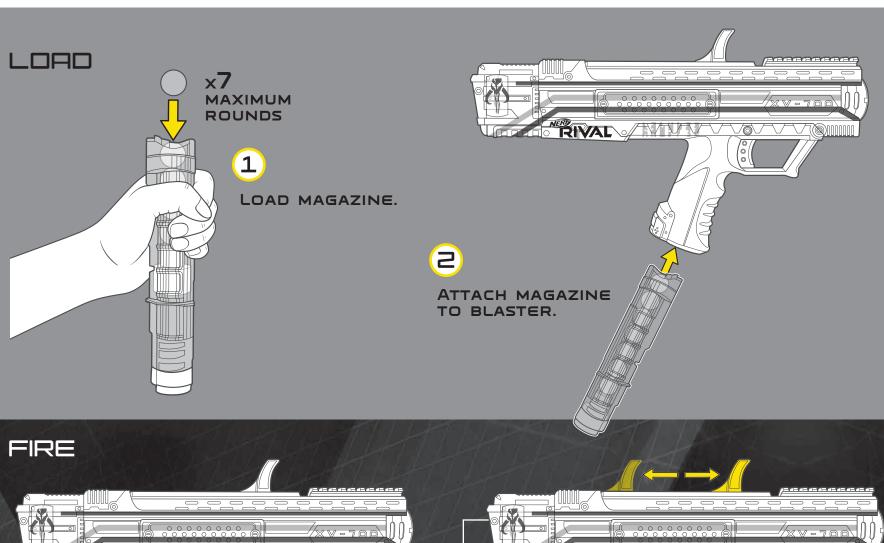

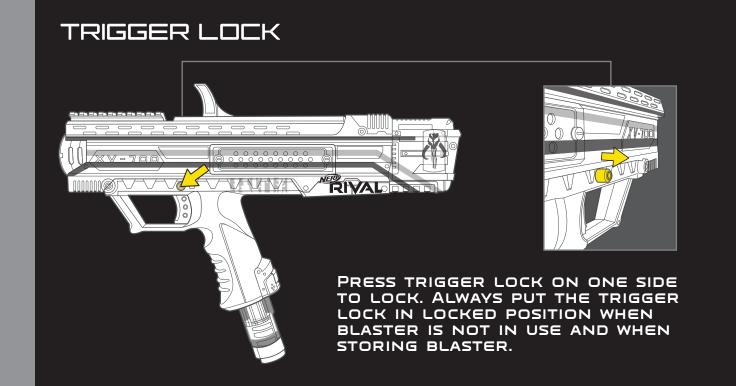

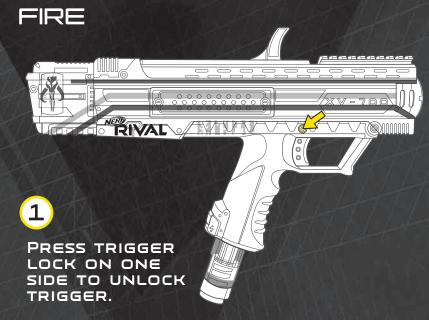

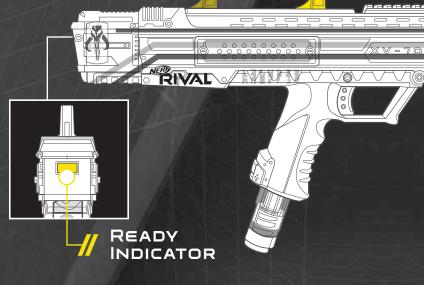

MOVE HANDLE ALL THE
WAY BACK, THEN ALL
THE WAY FORWARD TO
READY THE BLASTER.
READY INDICATOR WILL
APPEAR ON THE END OF
THE BLASTER. BLASTER
WILL NOT FIRE IF READY
INDICATOR IS NOT VISIBLE.

