

101.6 mm

POWER OFF:



SLEEP MODE

Lay FURBY down on its back to hear sleep sounds.

POWER OFF

Press the heart gem rapidly 3 times for full power off.



WAKE UP:

Press the heart gem or feed Furby!

TIPS & TROUBLESHOOTING:

I SAID A COMMAND, BUT FURBY WON'T DO IT.

- Try again: press the heart gem button, say "Hey Furby!", and repeat the command.
- WAIT FOR FURBY TO RESPOND to "Hey Furby" before you say the command.
- It may be too noisy where you are. Move to a quieter place.
- Turn Furby off and back on again.

FURBY'S FUR GOT DIRTY.

Gently wipe it down with a damp cloth, but don't let it get wet! Furby doesn't like water.

FURBY WON'T TURN ON OR DOESN'T SOUND RIGHT.

- Make sure you have fresh batteries. You won't lose the fun things you unlocked when you change the batteries.

FULL RESET:

Turn Furby upside down. Press and hold both the mouth and heart gem at the same time for over 5 seconds. You will see the ears flash red and hear a beep.