
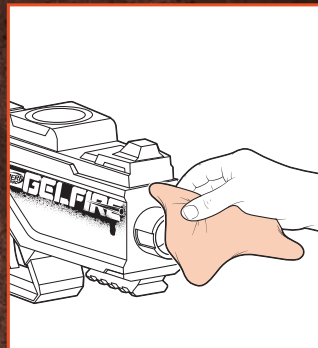
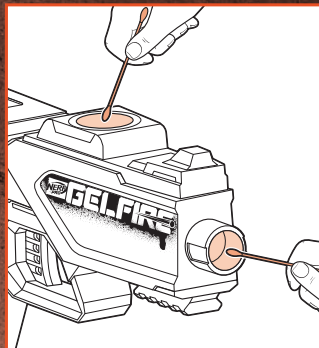


BLASTER STORAGE

1. Make sure trigger lock is in locked position when storing the blaster.
2. Prior to storage, clean the blaster of any Nerf Pro Gelfire round residue that remains in the hopper feed or the barrel. Use a long soft and clean item, such as a cotton swab, to clear debris. Clean only with a damp cloth or a soft, clean, dry item.

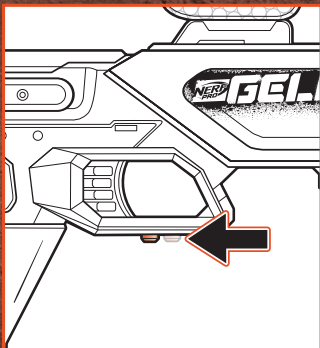

CUSTOMIZE

HOPPER

Nerf Pro Gelfire hoppers are compatible with all Nerf Pro Gelfire blasters.

Blasters each sold separately, subject to availability.



BARREL ATTACHMENT POINT

Barrel not included.

NERF and HASBRO and all related trademarks and logos are trademarks of Hasbro, Inc. © 2023 Hasbro.
F8682 1122F8682102

Manufactured by: Hasbro SA, Rue Emile-Boéchat 31, 2800 Delémont, CH. Represented by: Hasbro, De Entree 240, 1101 EE Amsterdam, NL. © Hasbro UK Ltd., P.O. Box 43, Newport, NP19 4YH, UK. Tel.: 00800 22427276.
consumer_affairs@hasbro.co.uk



NERF PRO GEL FIRE LEGION

14+



TO AVOID EYE INJURY:

WARNING :

Do not aim at eyes or face. Use of eyewear always required for players and people within range. Use only official NERF GelFire Rounds. Do not freeze or modify rounds. Do not modify blaster. Impact from rounds may cause temporary marks on skin. Ages 14 and up. Read instructions before use for important safety information.

WARNING :


COMPLY WITH ALL LAWS. Check to ensure the use and possession of this product is allowed where you are intending to use it, as using, displaying, transporting, or carrying this product may be prohibited by law or regulation in certain locations, such as schools, airports, government property, and high-density areas. Do not aim or blast at bystanders, animals, moving vehicles, or others' property. Do not alter this product to make it look like a firearm. Such alteration is dangerous and could be a crime and/or create confusion by law enforcement or others that it is a firearm.

DO NOT EAT. KEEP AWAY FROM PETS. ROUNDS MAY STAIN.



1. FILL HOPPER

Open rounds packet. Hold hopper with opening face up. Pour rounds into hopper.

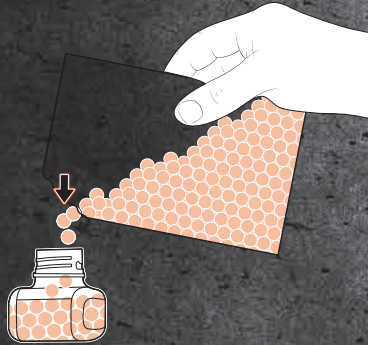

ROUND STORAGE



Discard any unused rounds.

2. ATTACH HOPPER

Turn blaster upside down.

Holding blaster upside down, twist hopper onto blaster with a quarter turn to lock in place. Make sure hopper is fully attached.

Turn blaster right side up.

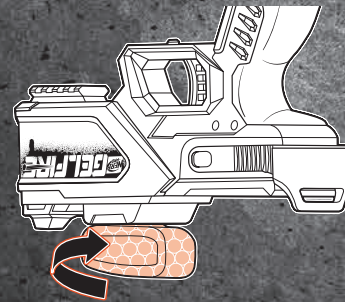
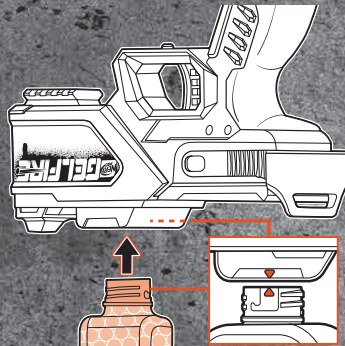


3. FIRE




Wear the included protective eyewear when you or anyone else nearby is using a Nerf Pro Gelfire blaster.

Unlock Trigger

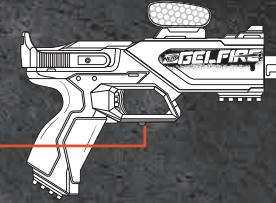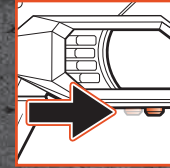


Single Fire

1. Pull priming handle back and release; handle will automatically spring back to original position.

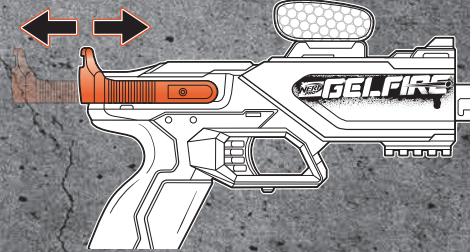

2. Pull trigger to fire 1 round.

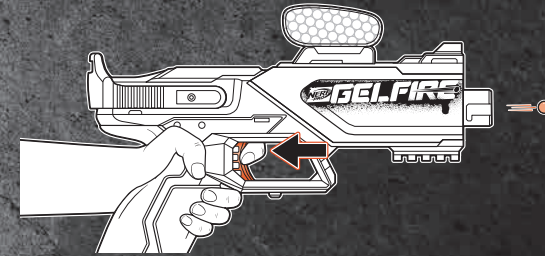

Slam Fire

With Slam Fire, you keep the trigger held down as you repeatedly pull/release the handle to fire each round.

