



AGES
8+



**ADULT ASSEMBLY
AND SUPERVISION
REQUIRED**


FOOD NOT INCLUDED. ADDITIONAL PURCHASE REQUIRED.

NOTE: All players must be aware of the contents/food being used. Make sure that all player food allergies are disclosed at the beginning of the game.

THE CHALLENGE

Only one will be crowned champion in this chow-chompin' contest.
To win, catch all the spinning snacks before the song ends!


CONTENTS

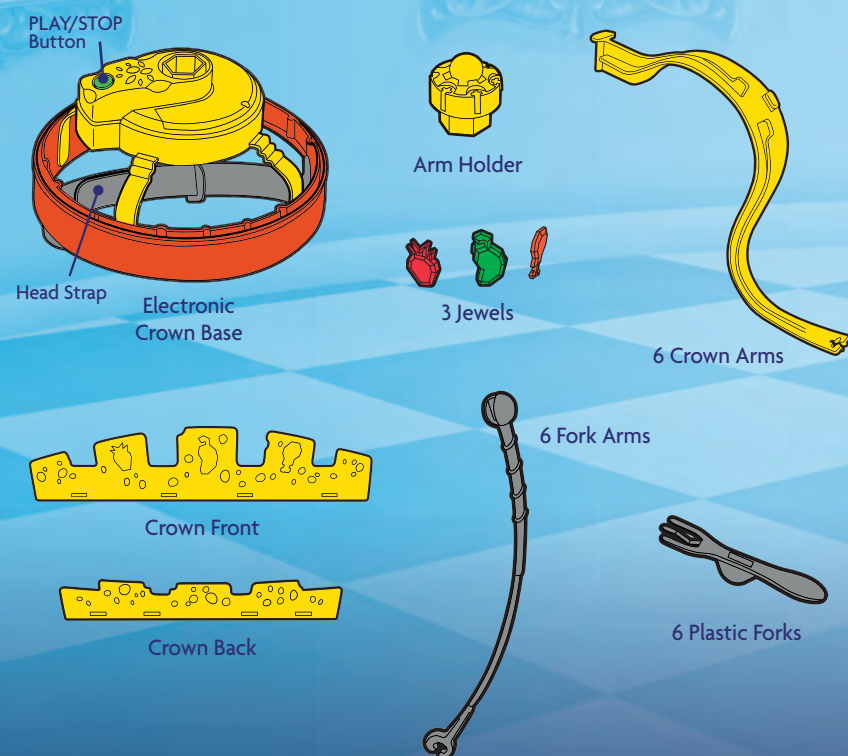


ASSEMBLE THE CROWN

The first time you play, insert batteries into the crown base (see illustration on back page).

Note to parents: Wash Forks thoroughly before use.

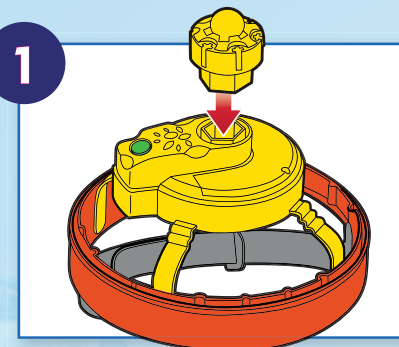


Click the Arm Holder into the top of the Crown Base.

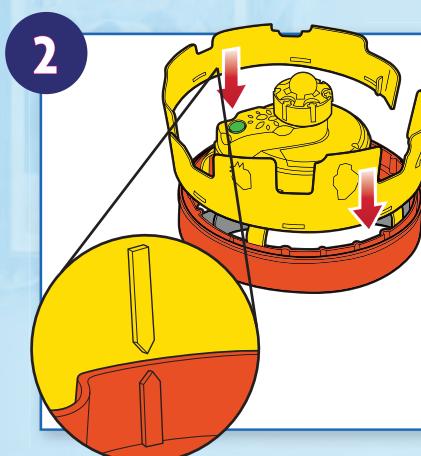


Fit the Crown Front and Crown Back into the Base.

To insert the Crown Front, line up the marks on the back of the Crown Front with the ones on the inside ring of the Base. Press down until you hear the pieces click into place.


Do the same with the Crown Back, lining up the marks on the back of the Crown Back with the ones on the Base. The ends of the Crown Back sit behind the Crown Front.

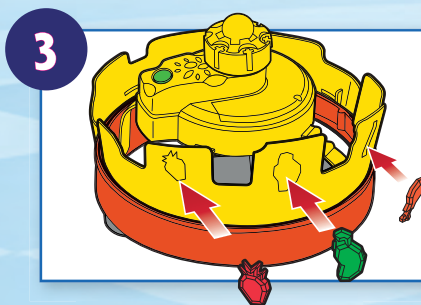


Snap the Jewels onto the Crown Front.

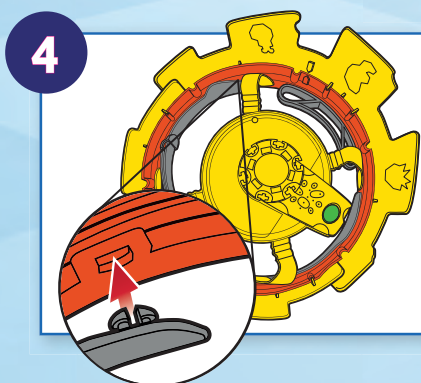

On each end of the Head Strap (near where it's attached to the Base), fit the tab into the hole in the Base.

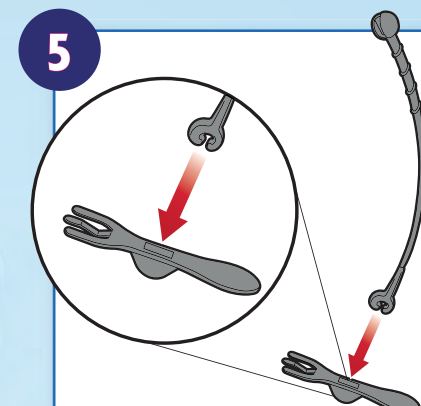

Press firmly to snap each Fork into a Fork Arm.

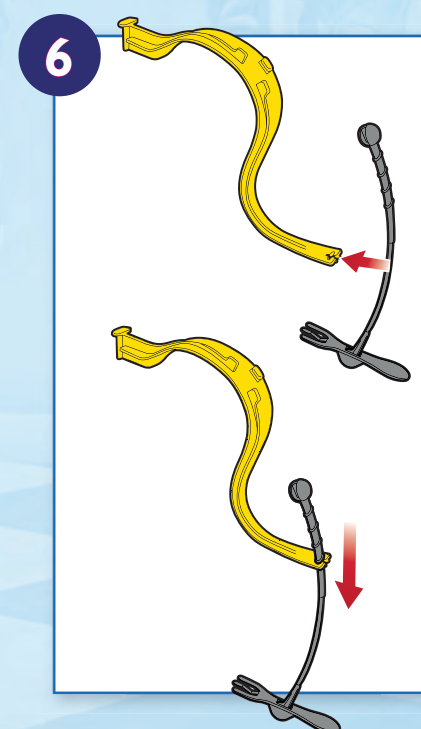

Attach a Fork Arm to each Crown Arm by sliding the skinny part of the Fork Arm through the slotted end of the Crown Arm. Pull the Fork Arm down and let it hang on any rung.


DO NOT attach the Crown Arms to the Arm Holder yet. You'll do that after fitting the Crown to your head.

TURN OVER FOR HOW TO PUT ON THE CROWN AND PLAY


PUT ON THE CROWN

Who's the hungriest? You go first!

It's better not to wear bulky clothing (like a hoodie) or have your hair up.

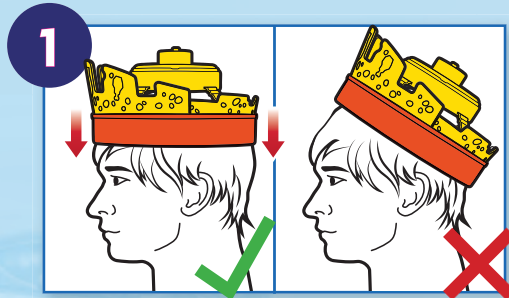

Before you put on the Crown, adjust the Head Strap roughly to the size of your head. Then pull the Crown down so that the front padding rests against your forehead.

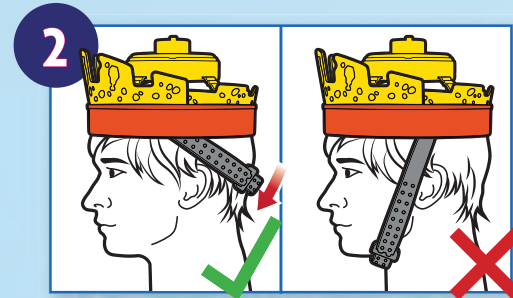


Pull the Head Strap down over the back of your head. You want a snug fit, but not too tight.





Shake your head up and down and from side to side. **Did the Crown fall off?** Take it off, tighten the Head Strap and try again.


LOAD THE SNACKS

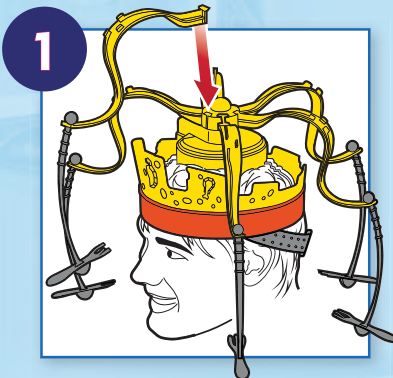

Get another player to fit each of the Crown Arms into the Arm Holder, then load the Forks with snacks.

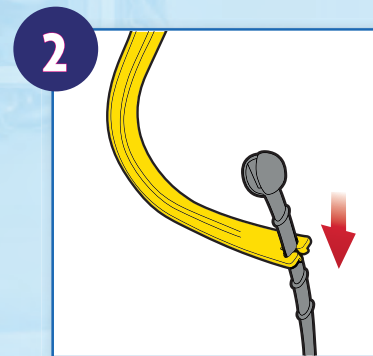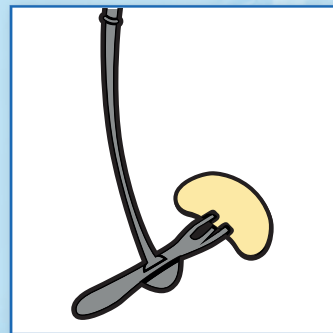

Adjust the length of the Fork Arms and tilt the Forks so they reach your mouth.

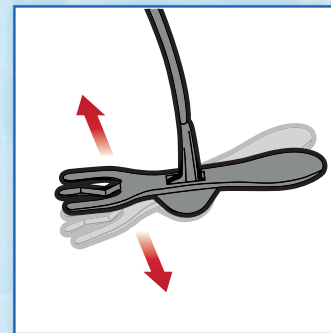



PLAY

- Stand up!** Get another player to press the PLAY/STOP button to select the game mode. Press quickly for a short game or hold for a longer game.
- After you select a mode, the Crown will start to spin and play music. The challenge begins!
- Bite off the snacks... if you can! Remember! You can't use your hands. Try to eat all the snacks before the music stops.
- When the song ends, your turn is over. Count how many snacks you ate. Be sure to remove any leftover food and wash the Forks between turns!
- Pass the Crown to any player who hasn't had a go yet. Now it's their turn.

Whoever eats the most snacks wins!

TASTY TIPS

- When passing the Crown between turns, remove the Crown Arms by lifting up the Arm Holder and setting it upside down.
- When putting the Crown down, secure the Fork Arms to the upper parts of the Crown Arms.

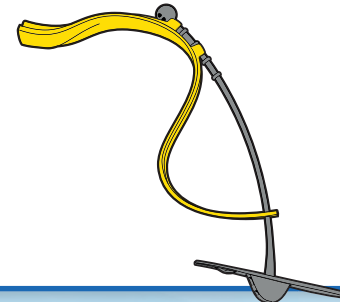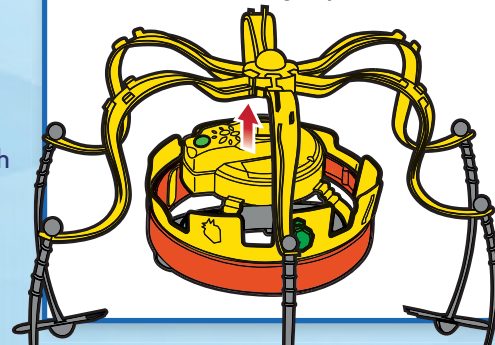

CLEAN UP

When you've finished playing, throw away (or eat) any leftover food. Detach the Crown Arms, Forks, Fork Arms, Arm Holder, Crown Front and Crown Back from the Base. Wash the Forks and make sure they are clean and dry before putting the game away.

x3 1.5V AA/LR6

ALKALINE BATTERY REQUIRED
NOT INCLUDED

TO INSERT BATTERIES

Use a Phillips/cross head screwdriver (not included).

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference. Batteries should be replaced by an adult.




CAUTION:

- Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
- Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
- Remove exhausted or dead batteries from the product.
- Remove batteries if product is not to be played with for a long time.
- Do not short-circuit the supply terminals.
- Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and reinserting batteries) if necessary.
- RECHARGEABLE BATTERIES:** Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**



This product and its batteries must be disposed of separately at your local waste recycling centre. Do not dispose of them in your household waste bin.

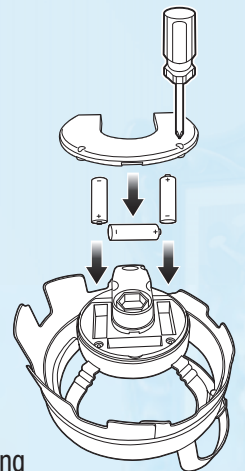

© 2017 Hasbro. All Rights Reserved.
Manufactured by: Hasbro SA, Rue Emile-Boéchat 31, 2800 Delémont CH.
Represented by: Hasbro, De Entree 240, 1101 EE Amsterdam, NL.
Australia consumer service: auconsumercare@ap.hasbro.com
New Zealand consumer service: nzconsumercare@hasbro.com
Consumer Services: Hasbro UK Ltd., PO Box 43 Newport NP19 4YD, UK.
Tel.: 00800 22427276. Consumer_affairs@hasbro.co.uk
Please retain this information for future reference.
Colours and contents may vary from those shown.

www.hasbro.co.uk



HASBROGAMING.COM

0418E2420102_NL [02]